

Versi-Lead For Flat Roofs

Contents

1 x Sheet Versi-Lead

17 x Versi-Lead Battens for large pack (9 Battens for small pack)


1 x UHU

Instructions for use

Make sure your Versi-Lead is laid out with the outside face facing upwards i.e. so it curls downwards when unrolled, as this makes it easier to lay.

Measure your roof and carefully cut your Versi-Lead sheet to fit your roof.

Using the UHU supplied cover the whole of the wood of your roof with UHU

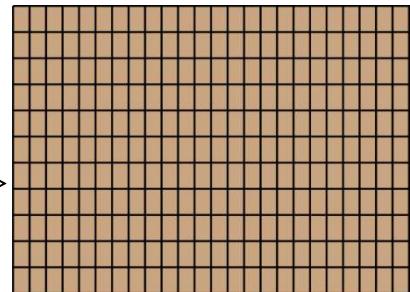

Lay the Versi-Lead carefully on your roof working from one end to the other smoothing as you go. Check the Versi-Lead is perfectly smooth without any air bubbles.

Place heavy books or similar on top of the Versi-Lead and allow to dry for approx 12 hours.

Laying the Versi-Lead Battens

First carefully cut your battens to the width of your roof with a sharp craft knife. (remember all the battens will be laid vertically)

Apply the UHU in a thin line to the underside of the batten you are sticking.

Stick 2 battens down, one each end of the Versi-Lead, flush with the edge of your roof.

Now measure your roof to fit all the other battens an even distance apart (as a guide this is approximately 5cms (2 inches) apart). Then mark or draw lines where you wish to place your battens.

Simply stick your battens using a thin line of the UHU on the underside of the batten.

Allow to Dry.



If you have a smaller roof you won't need to use all the battens provided. If you have a bigger roof you can add another kit and overlap the Versi-Lead to join it together. You would do this first before applying your battens.