


## LAYING YOUR BESPOKE MARBLE FLOOR

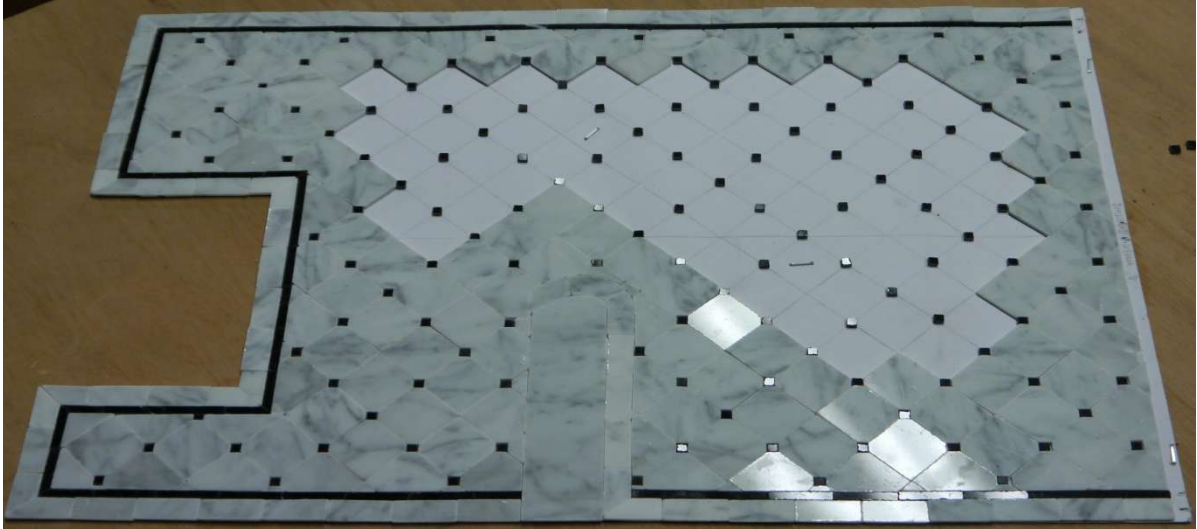

Carefully lay all your tiles individually onto your floor ensuring the Polished side of the Tile is facing upwards ( Do Not Stick until all the pieces are laid out )

Check your floor is laid out & balanced equally to the perimeter of your room

Don't be concerned about any tiny gaps between tiles as these can be kept to a minimum by correctly balancing out your tiles and will soon be filled after the final grouting of your floor. Remember that any gaps around the edge of your room will usually be covered by your skirting board where applicable, so allow for this when balancing your tiles

If you have any Large gaps or discrepancies or any tiles are over size to fit your floor then please provide templates showing any extra pieces or alterations you require to be made and we will be happy to correct these for you

You are now ready to lay your floor, remember Marble is naturally a semi transparent material so it is very important that when sticking your tiles down you brush a thin layer of our PVA Adhesive over the entire underside of the tile ( Never simply put a blob under the tile or this will show through and spoil the finish of your floor )

Once your whole floor is laid to your satisfaction leave your floor on a level surface at room temperature for 24 hours to ensure dry

# LAYING YOUR BESPOKE MARBLE FLOOR

## GROUTING YOUR FLOOR

Now you are ready to Grout your floor, on rare occasions you may find your floor fits so tight together that it is completely unnecessary to Grout at all but on the majority of floors you will find that you have to leave some very small gaps between tiles to balance the floor correctly to fit, if this is the case then please use our Marble/Ceramic White Tile Grout we provide and follow the instructions below.

First of all ensure your floor is completely clean, you must ensure your hands are also completely clean ( No nail varnish, or any other contaminants which may discolour the Marble or the Grout ) or you can wear tight latex examination gloves.

Mix 3-4 level tsp grout with 1 level tsp water so grout forms a smooth paste, not too thick and not too sloppy

Now simply using a clean sponge or lint free cloth wipe the grout into any joints or gaps in the marble

Work on an area no bigger than 5" x 5" ( 13cm x 13cm ) and ensure the grout is worked down into the joints, use a separate damp sponge or lint free cloth to carefully **wipe all excess grout off the face of the tiles before it dries**, this is the crucial bit, take extra care to ensure all grout is removed from the face of the tiles and the grout is just left in the joints and then start on your next area

Ensure you wash out your sponge or cloth regularly with Clean water and squeeze out all excess water, if your grout comes out the joints then either your cloth or sponge is too wet or your grout mix too sloppy

Take extra care to get this bit right as it's the final finish that will really set off your Marble floor

Now double check all your joints are filled and the face of your tiles are 100% clean and grout free and leave 24 Hours to dry

Please share your photos with us, send to [MINIATUREBRICKS@GMAIL.COM](mailto:MINIATUREBRICKS@GMAIL.COM) or you can share them on our Facebook or Instagram at [facebook.com/miniaturebricks](https://facebook.com/miniaturebricks) or [instagram.com/miniaturebrickscom](https://instagram.com/miniaturebrickscom)